

BY @ BigHorn



DOOR LOCK INSTALLATION KITS

70145

Wood Door Lock Installation Kit, with Carbide Spur Bits

Features:

- ▶ Kit includes three Carbide Tipped Spur Bits for boring 1" edge-bore and 2-1/8" cross-bore and the 1-1/2" cross-bore for dead bolts along with a quick release adapter
- Also includes Latch and Strike templates for a finish mortise
- 3 center locators also included along with a center marker
- Comes in a nice blow molded case

Kit Includes:

- · 70130 Door Boring Jig
- 70151 1" Carbide Tipped Spur Bit 1/2" Shank with 3/8" Hex End
- 70152 1-1/2" Carbide Tipped Spur Bit 1/2" Shank with 3/8" Hex End
- 70153 2-1/8" Carbide Tipped Spur Bit 1/2" Shank with 3/8" Hex End
- 70131A "A" Latch Template Finish Size 1-Inch x 2-1/4-Inch
- 70132A "A" Strike Template Finish Size 1-Inch x 2-1/4-Inch
- 70133B "B" Latch Template Finish Size 1-1/8-Inch x 2-1/4-Inch
- 70134B "B" Strike Template Finish Size 1-1/8-Inch x 2-3/4-Inch
- 70135 Center Locator, 1-Inch x 2-1/4-Inch
- 70136 Center Locator, 1-1/8-Inch x 2-1/4-Inch
- 70137 Center Locator, 1-1/8-Inch x 2-3/4-Inch
- 70140 Reducer Ring, Standard 2-1/8" to 1-1/2"
- 70142 Center Marker, for 1" Latch Bore with Stainless Steel Point
- · 70143 Quick Release Adapter
- 70154 90° Spring Loaded Corner Chisel Premium Small
- 70147 Red Blow Molded Carrying Case



70145

Wood Door Lock Installation Kit, with Strike & Latch Mortiser

Features:

- Kit includes three Carbide Tipped Spur Bits for boring 1" edge-bore and 2-1/8" cross-bore and the 1-1/2" cross-bore for dead bolts along with a quick release adapter
- Also includes Latch and Strike templates for a finish mortise
- Comes in a nice blow molded case

Kit Includes:

- · 70130 Door Boring Jig
- 70151 1" Carbide Tipped Spur Bit 1/2" Shank with 3/8" Hex End
- •70152 1-1/2" Carbide Tipped Spur Bit 1/2" Shank with 3/8" Hex End
- 70153 2-1/8" Carbide Tipped Spur Bit 1/2" Shank with 3/8" Hex End
- 70140 Reducer Ring, Standard 2-1/8" to 1-1/2"
- 70142 Center Marker, for 1" Latch Bore with Stainless Steel Point
- 70143 Quick Release Adapter
- 70147 Red Blow Molded Carrying Case
- 70138 Strike Mortiser for Bore Master, 1" x 2-1/4" (Full Lip)
- 70139 Latch Mortiser for Bore Master, 1" x 2-1/4"



TEMPLATES & DRILL JIG

70130

Drill Jig

Features:

This clamp on door fixture will adjust from 2-3/8" to 2-3/4" backset positions for most all cylindrical locksets and will adjust for doors from as thin as 1" to 2-1/2" thick



70132A

Strike Template 1-3/4" x 2-1/4" Full Lip



Features:

- Creates a finish mortise of 2-1/4" high x 1-3/4" wide or Full Lip (cuts clear through the edge of the door jamb) on the edge of the jamb for doors up to 1-3/4" thick
- ▶ Length of the template is 10" and it's supplied with two nail attaching assemblies to attach to your door jamb. Adjustable for 1-3/8" and 1-3/4" door jambs
- Use a 1/2" cutter and a 5/8" OD template guide attached to your router to produce perfect mortises

70134B

Strike Template 1-1/8" x 2-3/4" 'T' & Dead Bolt Strike



Features:

- Creates the finish mortise for the strike plate when installing" T" strikes with a finish size of 1-1/8" x 2-3/4" and also deadbolts with the same dimension
- A red plastic block off plate is installed across the "T" part of the pocket with two screws to form the deadbolt pocket
- ▶ Use a 5/8" outside diameter router template guide on your router and a 1/2" hinge mortising bit with this template.

70132

"B" Latch Template 1" x 2-1/4"



Features:

- Creates a finish mortise of 2-1/4" high x 1-3/4" wide or Full Lip (cuts clear through the edge of the door jamb) on the edge of the jamb for doors up to 1-3/4" thick
- ▶ Length of the template is 10" and it's supplied with two nail attaching assemblies to attach to your door jamb.

70131A

Latch Template 1" x 2-1/4"



Features:

- Creates a finish mortise of 1" by 2-1/4" for the edge of the door
- Use a 5/8" outside diameter router template guide on your router and a 1/2" hinge mortising bit

70133B

Latch Template 1-1/8" x 2-1/4"



Features:

- ▶ Creates a finish mortise of 1-1/8" by 2-1/4" for the edge of the door
- ▶ Includes the red plastic center locator to position the template on the edge of the door in reference to the 1" hole bored in the door edge
- Use a 5/8" outside diameter router template guide on your router and a 1/2" hinge mortising bit with this template

70131

"A" Latch Template 1" x 2-1/4"



Features:

- ➤ Creates a finish mortise of 1" by 2-1/4" for the edge of the door
- ▶ Use a 5/8" outside diameter router template guide on your router and a 1/2" hinge mortising bit
- ▶ Comes with a Center Locator

70133

"A" Strike Template 1-1/8" x 2-1/4"



Features:

- Creates a finish mortise of 1-1/8" by 2-1/4" for the edge of the door
- ▶ Includes the red plastic center locator to position the template on the edge of the door in reference to the 1" hole bored in the door edge
- Use a 5/8" outside diameter router template guide on your router and a 1/2" hinge mortising bit with this template
- ▶ Comes with a Center Locator

TEMPLATES & ASSEMBLIES

70134

"B" Strike Template 1-1/8" x 2-3/4"



Features:

- ▶ Creates the finish mortise for the strike plate when installing" T" strikes with a finish size of 1-1/8" x 2-3/4" and also deadbolts with the same dimension
- ▶ A red plastic block off plate is installed across the" T" part of the pocket with two screws to form the deadbolt pocket

70157

'B' Latch & Strike Template Kit Finish Size 1-1/8" x 2-1/4" & 1-1/8" x 2-3/4" Replaces Templaco LS-171B



Features:

 Use a 5/8" outside diameter router template guide on your router and a 1/2" hinge mortising bit

70147

Carrying Case - Red Color

Features:

A heavy-duty Black plastic double wall construction in the body of this case gives long lasting service and protects your Door Locker Jig kit from damage



70149

Stops (1 Pair) With Screws



- ▶ These hard-plastic template stops have a full 1/2" of adjustment, over 1/8" more than our old style stops
- ▶ Stops measure 1.149" tall x 1.125" wide x .191" thick and have two slots that are .175" x .750" long





70156

'A' Latch & Strike Template Kit Finish Size 1" x 2-1/4" Replaces Templaco LS-166A



Features:

 Use a 5/8" outside diameter router template guide on your router and a 1/2" hinge mortising bi

70146

Latch & Strike Templates (A & B) with Center Locators Finish Sizes (1" x 2-1/4", 1-1/8" x 2-1/4", 1-1/8" x 2-3/4")



® BigHorn

Features:

 This kit includes Latch and Strike templates for a finish mortise (70131, 70132, 70133 & 70134)




 3 center locators also included (70135, 70136, 70137)

70148

Nail Assembly (1 Pair) With Nuts

Features:

 Includes two nail assemblies and attaching nuts



 Nails are held into their respective steel bushings with a solid brass retaining ring



70159

Multi Strike Template



Features:

- ▶ 1" x 2-1/4" deadbolt, 1" x 2-1/4" full-lip, 1-1/8" x 2-3/4" T and 1-1/8" x 2-3/4" deadbolt
- Includes 2 center locators and attaching nail assemblies
- Tack-on template will produce 4 strike mortises with finish sizes

TEMPLATES & ASSEMBLIES

19592

90 Degree Corner Chisel

Features:

- Self-aligns for optimum accuracy
- ▶ Spring-loaded; 3/8" cutter edge for precision
- More efficient than a hand chisel



DOOR HOLDERS & DRILLING BITS

70151

1" Carbide **Tipped Spur Bit**



Features:

- ▶ 1" Carbide 1/2" Shank With 3/8" Hex End
- Overall length: 8 inches
- ▶ High quality micro grain carbide cutting surfaces are welded to each cutter face and tip

70152

1-1/2" Carbide **Tipped Spur Bit**



Features:

- ▶ 1-1/2" Carbide 1/2" Shank With 3/8" Hex End
- Overall length: 7 inches
- High quality micro grain carbide cutting surfaces are welded to each cutter face and tip

70153

2-1/8" Carbide Tipped Spur Bit



- ▶ 2-1/8" Carbide, 1/2" Shank With 3/8" Hex End
- ▶ Overall length: 7 inches
- High quality micro grain carbide cutting surfaces are welded to each cutter face and tip

19669

1/4" Pattern Routing Bit or Mortising Hinge w/Top Bearing Routing Bit

Features:

- Excellent for Laminates, MDF, Plywood, Wood, Acrylic
- ▶ Top Bearing, carbide tip for superior cutting quality and endurance

70120

Door & Board Lifter

Features:

- Foot operated lifter to support door while fitting into frame
- Lifts door 2-3/8 inch high and maximum weight of 165 pounds
- Raises up parallel with 360 degree rotation
- Made of metal with non-marring foot pad

Self-Adjusting Door Holder

Features:

- ▶ Features wedge design to adjust for door thickness of 1" to 2-1/4"
- Damage free application prevents scratching and gouging
- Instant in and out feature saves time

13202

Air Pump Wedge

Features:

- Inflates and deflates easily & quickly
- Lift and hold up to 300 pounds
- ballistic nylon


w/Top 5/8" Dia Bearing Router Bit

Features:

 Top Bearing, carbide tip for superior cutting quality and endurance





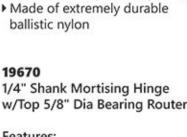



ROUTER TEMPLATE GUIDES

Brass Router Template Guides

- ▶ Precision Machined Brass for accuracy and durability
- ▶ Fits Porter Cable and many standard routers

Comes in Carded Display Packs

Part#:	19660	19661	19662	19663	19664	19665	19666
I.D.	21/32"	11/32"	13/32"	9/32"	5/8"	17/32"	1/4"
O.D.	3/4"	7/16"	1/2"	3/8"	54/64"	5/8"	5/16"
							Ti di

10 10 10 C

19604

9 Pcs. Brass Router Bushing Set

Includes:

Part# 19660, 19661, 19662, 19663, 19664, 19665, 19666, 19667

Features:

- ▶ Set comes in a BMC
- ▶ 7 assorted bushings & 2 lock nuts
- ▶ Part# 19660, I.D. 21/32" O.D. 3/4"
- ▶ Part# 19661, I.D. 11/32" O.D. 7/16"
- ▶ Part# 19662, I.D. 13/32" O.D. 1/2"
- ▶ Part# 19663, I.D. 9/32" O.D. 3/8"
- ▶ Part# 19664, I.D. 5/8" O.D. 54/64"
- ▶ Part# 19665, I.D. 17/32" O.D. 5/8"
- Part# 19666, I.D. 1/4" O.D. 5/16"

Brass Router Template Guide Lock Nut

Features:

- ▶ Knurled surface for easy tightening
- ▶ Compatible with all template guides
- ▶ Precision Machined Brass for positive locking and durability



Brass Router Template Guide Kit

Includes:

Part# 19665, 19667

Features:

- ▶ I.D. 17/32" O.D. 5/8"
- Knurled surface for easy tightening
- Compatible with all template guides
- Comes in Carded Display Pack







